SRT 4620
FREE - TO - AIR
DIGITAL SATELLITE RECEIVER
USER'S MANUAL

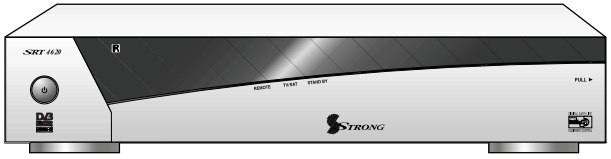

STRONG & Co. (FAR EAST), LTD.
P. O. Box : 85, YOKOHAMA, KANAGAWA-KEN
JAPAN 231-91 - FAX : +81 45 662-4957
Website : www.strong-technologies.com
E-mail : tech@strong-technologies.com

E109000176B

Contents

1. Introduction **2**
1.1. Overview
1.2. Main Features

2. Safety/Precautions **3**
2.1. Safety
2.2. Precautions

3. Check Point before Use **5**
3.1. Accessories
3.2. The Satellite dish

4. Controls/Functions **6**
4.1. Front Panel
4.2. Rear Panel
4.3. Remote Control

5. Using Remote Control **10**
5.1. Batteries
5.2. Range Of Operation

6. How to Connect **11**

7. Operation **13**
7.1. Getting Started
7.2. Channel Editing
7.3. System Parameters
7.4. Transponder
7.5. Factory Set
7.6. Other Function on Remote Control

8. Trouble Shooting **45**

9. Specifications **46**

DiSEqC is a trademark of EUTELSAT.

Introduction 1

1.1 Overview

This satellite receiver is designed for using digital free-to-air channel reception. Enjoy the rich choice of more than 4,000 different channels, broadcasting a large range of culture, sports, cinema, news, events, etc. This receiver is a technical masterpiece, assembled with the highest qualified electronic parts.

1.2 Main Features

- Fully compliant with MPEG-2 and DVB standards
- User friendly operating Menu and On-Screen Graphic Menu
- Easy to use EPG(Electronic Program Guide) on screen
- Age protection lock function
- Tele-text encoding
- Manual PID control
- Software downloading via RS-232C connector
- DiSEqC 1.2 compatible

Safety/Precautions

2

2.1 Safety

Be sure to read the user's manual before starting the operation of the unit.

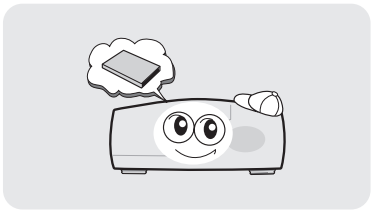

Do not touch the power cord with wet hands as it may cause electric shock.

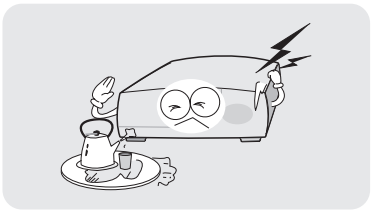

Never open the cover. It is very dangerous to touch the inside of the unit due to possible electric shock.

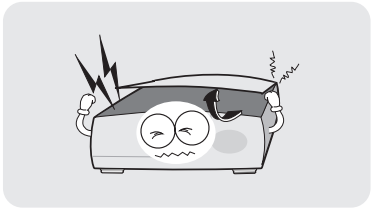

Place the unit in a well ventilated and no-heat environment.

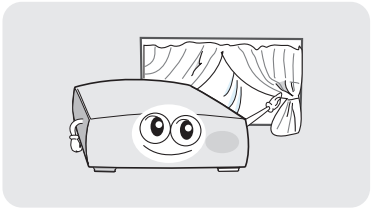

When you do not use this unit for a long time, make sure that power cord is pulled out from the outlet. Also do not use a damaged power cord as it may cause fire or electric shock.

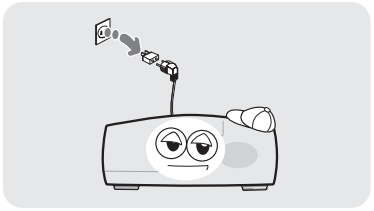

A professional installation is required. If reception is interrupted, contact your local service centre.

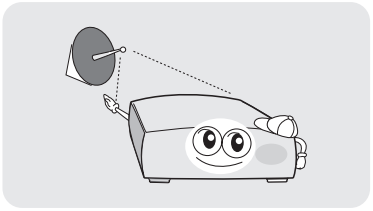

2

2.1 Precautions

When installing the unit

Install the unit horizontally. An uneven installation may cause the unit to be damaged.

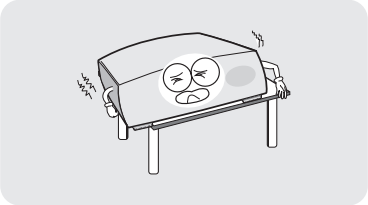

Do not put heavy items such as a TV on the unit. That may cause the unit to be damaged.

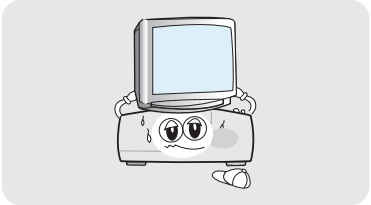

Do not install the unit:

- **Where it is subject to vibrations**
- **Where it is exposed to direct sunlight**
- **Where there is humidity**
- **Where the temperature is too high or too low.**
- **Where there is no ventilation**

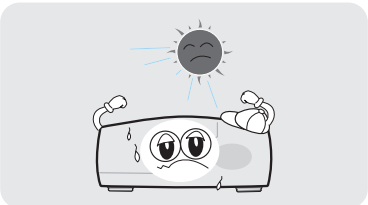

Moving the unit to a hot area from a cold one will cause condensation.
Do not operate the unit for one or two hours or until it has dried completely.

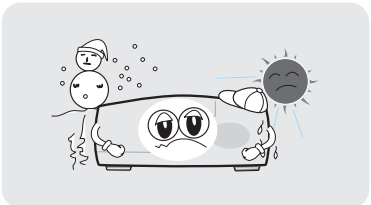

Check points before Use

3

3.1 Accessories

Accessories of the Unit

User's manual : 1

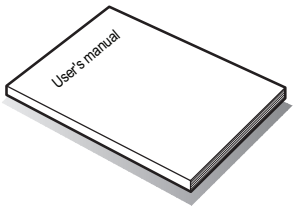

Remote control : 1

Batteries (AAA type) : 2

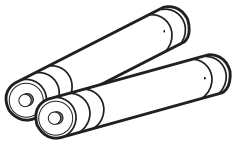

RCA video/audio cable : 1

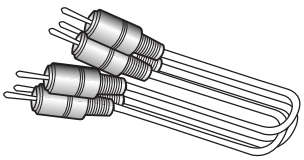

▶ If any accessories listed above are missing, contact the sales representative where you purchased this unit.

3.2 The Satellite dish

Your dish should be properly installed and azimuth and elevation must be precisely set up.

▶ This unit is working with DiSEqC 1.2 on a compatible antenna positioner.
Ask your dealer for information.

Controls/Functions

4

4.1 Front Panel

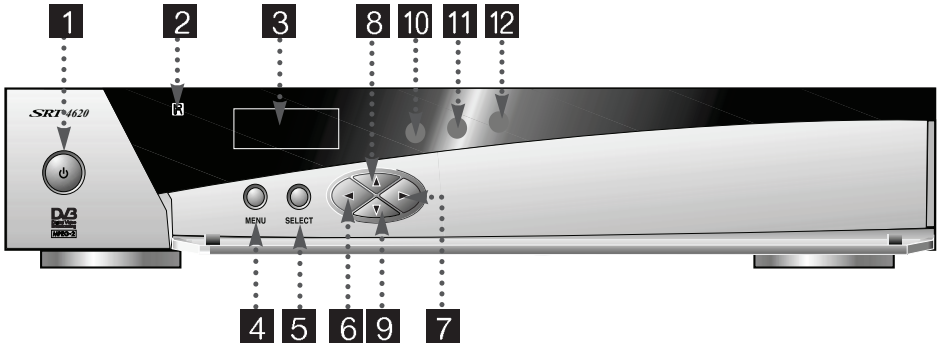

1 **Power :** To switch the receiver in "standby" mode or in power on mode.

2 **Remote Sensor :** Receives the infrared signal from remote control.

3 **Channel Display(4 Digit)**
- When you connect the power line of the receiver, the current time is displayed.
- After programming, the program number is displayed.

4 **Menu :** To launch or terminate the menu application.

5 **Select :** To activate a highlighted item or go to next level on hypertext menu or confirm the user's action.

6 - 7 **Vol. (◀/▶):** To adjust the volume level or change the value of an item with preprogrammed values. The Key Vol. ◀ can be used as a backspace to cancel the numerical input.

8 - 9 **CH. (▲/▼):** To change channel or cursor position on the application screen.

10 **Remote Control indication light :** Flashes orange when receiving data from remote control.

11 **TV/Sat. mode Indication lamp light :** Turn on green while receiving the signals from terrestrial UHF/VHF antenna.

12 **Standby/Power on Indication light :** Turn on red while in the "standby" mode and turn off the red light while in the power on mode.

4.2 Rear Panel

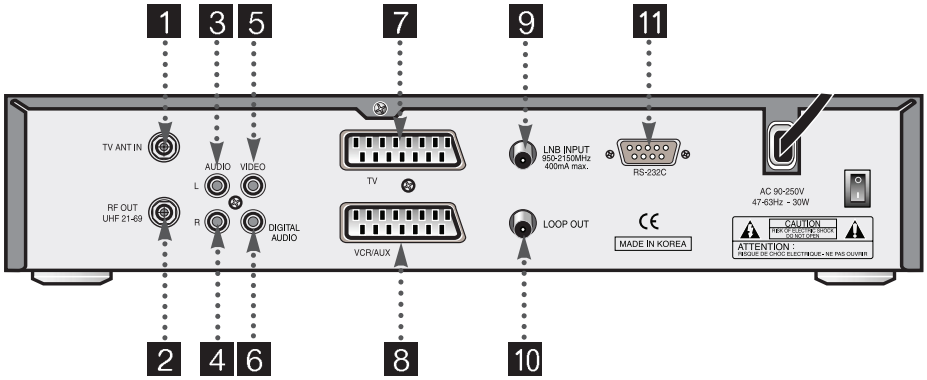

No.	Name	Connector	Function
1	TV ANT IN	IEC 169-2 female	Input from terrestrial antenna.
2	RF OUT UHF 21-69	IEC 169-2 male	Output to TV.
3	AUDIO L	RCA cinch	Left audio output.
4	AUDIO R	RCA cinch	Right audio output.
5	VIDEO	RCA cinch	Composite video output
6	Digital Audio	RCA cinch	Digital Audio Output
7	TV SCART	SCART	SCART output to TV
8	VCR/AUX SCART	SCART	SCART output to VCR, analog receiver or Hi-Fi.
9	LNB INPUT	IEC 169-24 female	IF input from LNB to digital tuner.
10	LOOP OUT	IEC 169-24 female	IF loop-through output from digital tuner.
11	RS-232C	DB-9	Low speed serial port

4.3 Remote Control

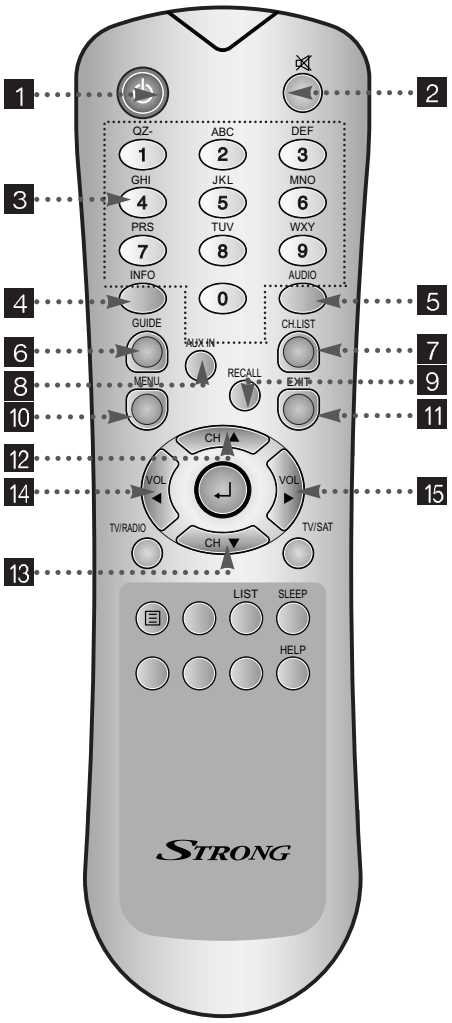

1 **POWER :** To switch into 'standby' or 'power on' mode.

2 **MUTE :** To turn the sound on/off.

3 **Numeric Keys(0-9) :** To select channels and input of channel numbers or characters.

4 **INFO. :** To display the information of the current channel.

5 **AUDIO :** To change the audio track, stereo-mono mode.

6 **GUIDE : (EPG : Electronic Program Guide)** To watch program information. Press once more to return to normal mode.

7 **CH LIST :** To watch the channel list. Press ↵ to confirm or press EXIT to return to previous chosen channel.

8 **AUX IN :** To select the output mode of scart connector.

9 **RECALL :** To return to the previous chosen channel.

10 **MENU :** To enter/exit the main menu.

11 **EXIT :** To return to previous status or menu.

12 - 13 **Up & Down :** To change the value of a selected item with preprogrammed values in menu.

14 - 15 **Left & Right :** To move the cursor up and down in menu. can be used as a backspace to cancel the numerical input.

4.3 Remote Control

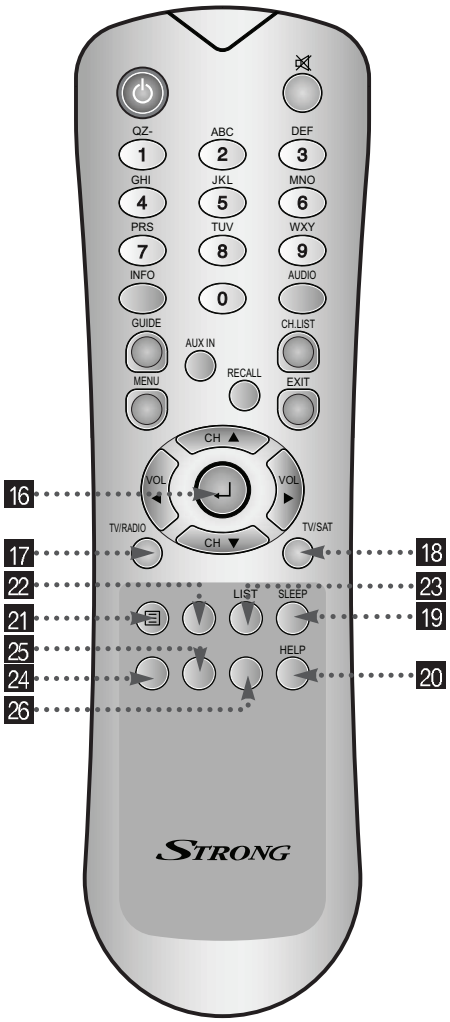

16 **(ENTER) :** To select an item or to confirm a menu. Pause function.

17 **TV/RADIO :** To switch between the TV and radio channels.

18 **TV/SAT :** To toggle the TV output source between the satellite input and UHF/VHF antenna input.

19 **SLEEP :** To switch off the receiver automatically after between 30 and 150 minutes.

20 **HELP :** To display the information of the current menu.

21 **BLUE :** To delete a channel from the Channel List menu. To show extended program information in the EPG menu. To see Teletext Service Data.

22 **WHITE :** To add a new channel to the Channel List menu.

23 **ORANGE :** To see variant channel lists for user's convenience in the Channel List menu.

24 **RED :** To setup favorite channel lists in the Channel List menu.

25 **GREEN :** To lock channel in the Channel List menu. To show current/next program information in the EPG menu.

26 **YELLOW :** To move a channel to other position in the Channel List menu. To show program schedule information in the EPG menu.